
Visual representation

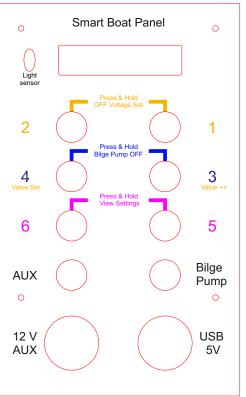

Bilge pump safety shut down in case of malfunction

Simultaneously press keys 3 and 4 until this screen appears
Bilge Pump Safety Turn OFF
Pump off is an indication that the pump is manuall turned off
13.7U 0.0A PUMP OFF +24.8 C
To activate blige pump simultaneously press keys 3 and 4 until this screen appears
Bilge Pump Safety Clear

QUICK SETUP

NOTE:

While the panel is turned off, microprocessor still supervises battery status and if the voltage descends under the specified voltage, devices will be turned off. If water level rises to set height of the safety sensor bilge pump will keep the water level on wanted height ultil there is enough voltage in battery.

Battery status display

Bttery protection is active and all devices

0.0A

0.00

0.0A

0.0A

0.00

+24.9

+24.9

+24.9

+24.9

+24.9

. 6

3

Ų

S

are shut down

ЯL.

Low battery indication

.0.SV

2.8U

3. ZU

Over charging alarm

4.6U

Chg

Simultaneously press keys 5 and 6

Unl:

Delay:

until the properties show up.

Setup properties

OUER

በዮዮ

0ff

Charging

OK

Battery is ready

Jat.t.

Battery charging


ow Batt

Battery protection setup


Simultaneously press keys 1 and 2 untill the setup menu shows up. Press key 3 to change value

S		T		0	f	f	Ų	o	1	t	a	9	e	
1	1		6											

 Press key 4 to save wanted value



 
Set shut down delay time to wanted level



Press key 4 to save the set value



 Water alarm



Blown fuse alarm

If eather one fuse blows the alarm will appear on screen with information about the blown fuse location

